


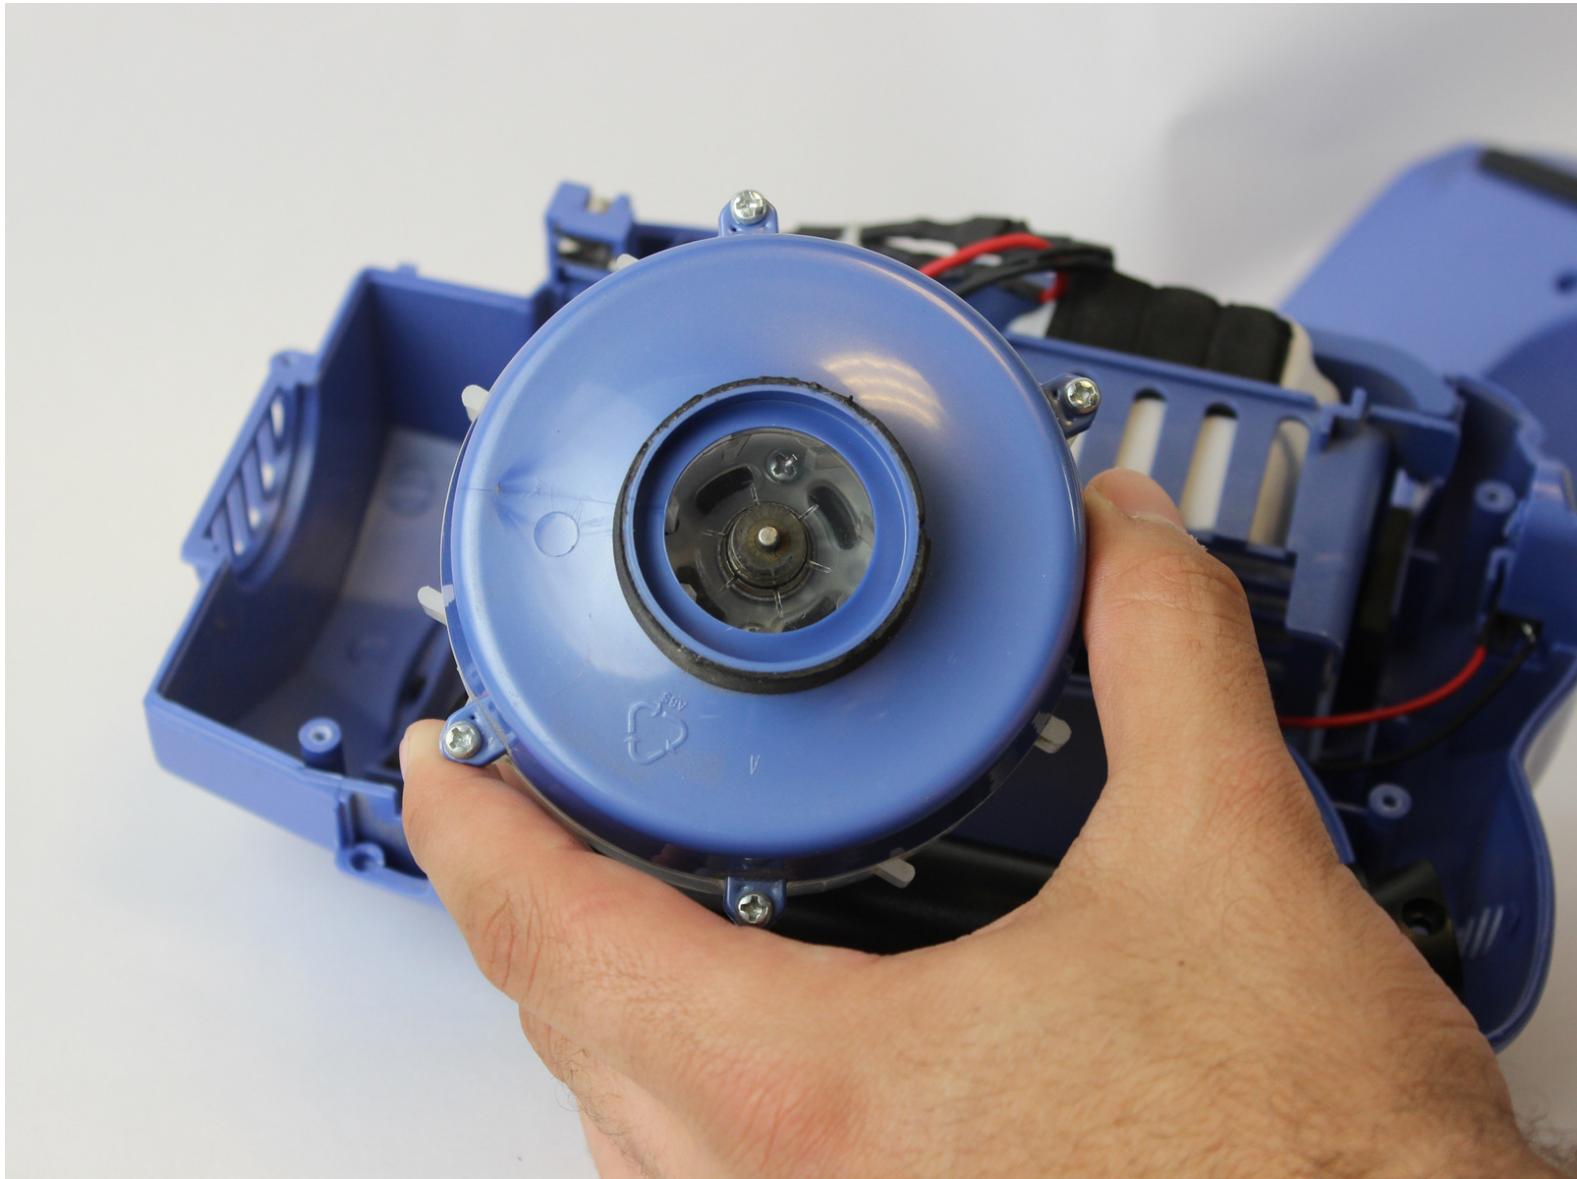

Shark Cordless Pet Perfect Rear Motor Replacement

Taking apart the rear motor housing to replace the faulty suction motor.

Written By: Ben Dzugan



INTRODUCTION

If you are having a problem with your device's Rear Motor, Here is a Step by step guide to replace a broken or faulty Rear Motor.



TOOLS:


- [Soldering Station](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Rear Motor




- Remove the Dust Cup Container from the motor housing.

Step 2

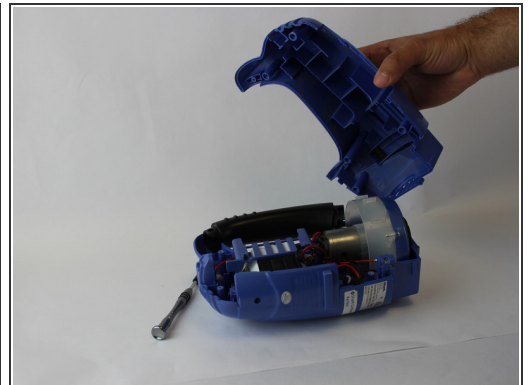


- Remove the five 14mm screws with the PH2 Bit from the motor housing and pull the housing apart.

Step 3

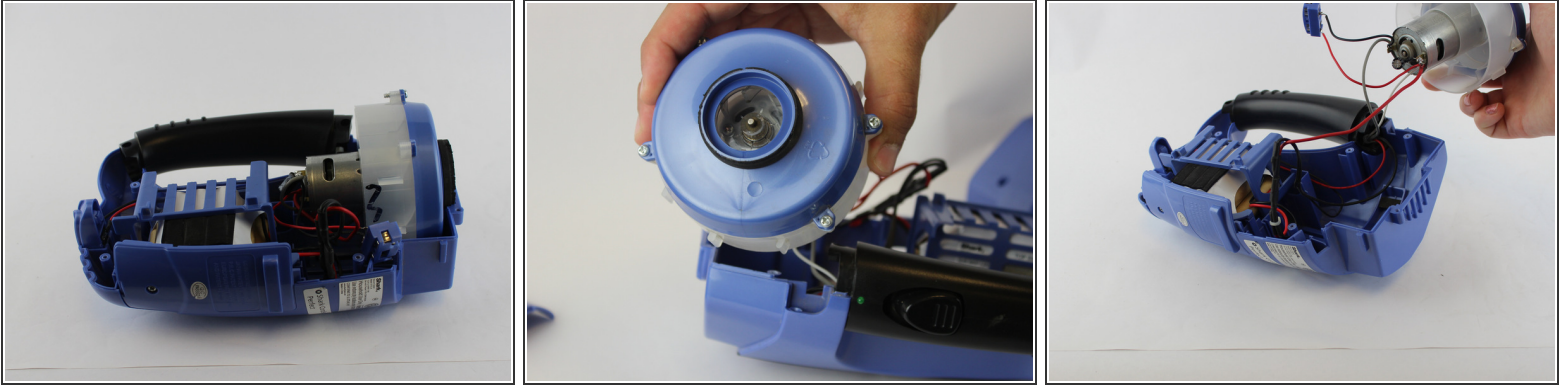

- Pull the motor upward and away from the the housing.

Step 4

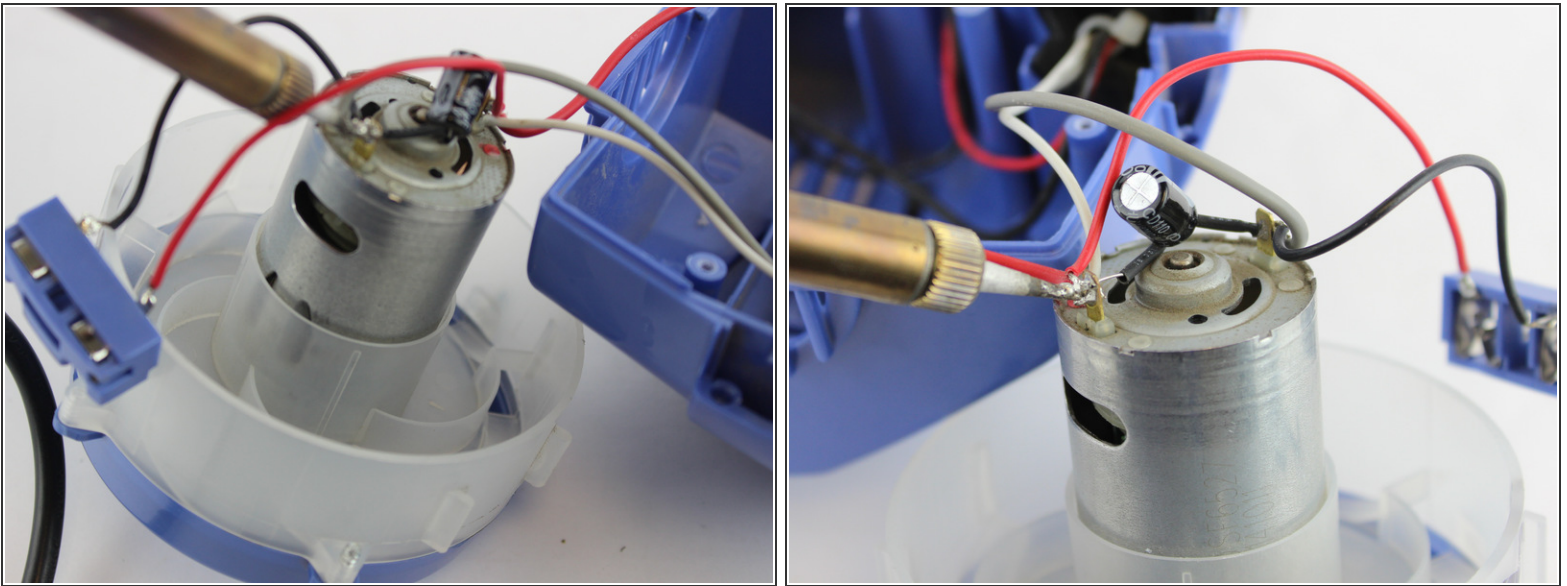

- With the soldering tool separate the motor from the gray wire and the black wire.
- Turn the motor to the other side. Then separate the motor from the two red wires, and the white wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 08:52:26 AM.